



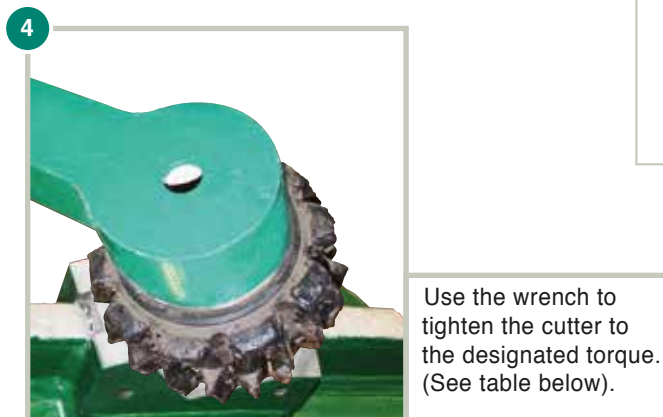

Lo Torque Hole Opener

Installation guide & steps

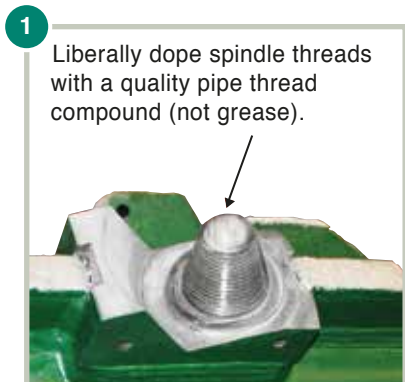

Journal size	Recommended torque
LT4	1,500 ft-lbs
LT6	4,500 ft-lbs
LT8	12,000 ft-lbs

Prime Horizontal offices

www.primehorizontal.com

United States, Canada, Mexico, Brazil

Prime Horizontal Inc
 1302 Gulf Boulevard, New Iberia, LA 70560 US
 Ph (US): +1 337 359 9061
 Ph (CA): +1 780 800 6614
 Ph (BRZ): +55 71 3023 0934

Europe, China, Middle East

Prime Horizontal Ltd
 Salland 3
 1948 RE Beverwijk
 The Netherlands
 Phone: +31 251 271 790

Australia, Southeast Asia, India

Prime Horizontal Australia Pty Ltd
 10 Enterprise Street, Cleveland,
 QLD 4163, Australia
 Ph (AUS): +61 73 821 3684
 Ph (IND): Phone: +91 997 172 9753